

AROMA[®]

**Electric Simmering
Potpourri Pot**

Instruction Manual
APP Series

IMPORTANT SAFEGUARDS

Basic safety precautions should always be followed when using electrical appliances, including the following:

1. Important: Read all instructions carefully and familiarize yourself with the manual before using this appliance.
2. Unplug from outlet when not in use and before cleaning. Allow to cool completely before putting on or taking off parts.
3. To protect against electrical shock, do not immerse cord, plug or the appliance itself in water or other liquid.
4. Close supervision is necessary when the appliance is used near or by children. This appliance is not intended to be used by children.
5. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.

SAVE THESE INSTRUCTIONS

IMPORTANT SAFEGUARDS

6. The use of accessory attachments not recommended by the manufacturer may cause injuries.
7. Do not touch hot surfaces. Use handles or knobs.
8. Do not let cord hang over the edge of a table or counter, or touch hot surfaces.
9. Do not place on or near a hot gas or electric burner or in a heated oven.
10. Do not use the appliance for other than the intended use.
11. Extreme caution must be used when moving the appliance containing hot liquids.
12. Always unplug from the base of the wall outlet. Never pull on the cord.
13. Do not use appliance to cook food.
14. Do not use wax and/or oils of any kind in the appliance. Do not mix wax or oils with water or liquid potpourri.

SAVE THESE INSTRUCTIONS

SHORT CORD INSTRUCTION

1. A short power-supply cord is provided to reduce risk resulting from becoming entangled in or tripping over a longer cord.
2. Longer extension cords are available and may be used if care is exercised in their use.
3. If a longer extension cord is used:
 - a. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
 - b. The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled by children or tripped over unintentionally.

HOUSEHOLD USE ONLY


POLARIZED PLUG

This appliance has a **polarized plug** (one blade is wider than the other); follow the instructions below:

To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

HOUSEHOLD USE ONLY

DO NOT DRAPE CORD

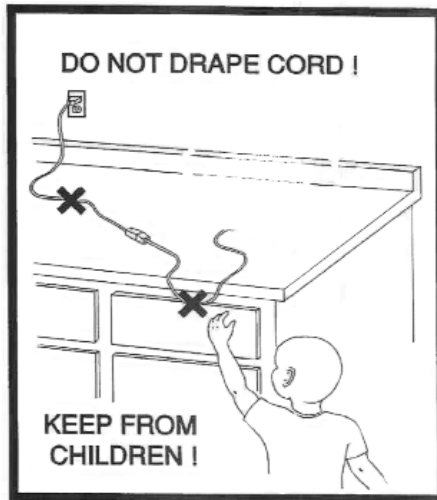

INSTRUCTIONS FOR USE

Your Aroma potpourri pot can be used with either:

- Water-based liquid potpourri or*
- A combination of water and dried scented flowers.*

Unfortunately, the potpourri pot was not designed to be used with wax and/or oils of any kind. Do not mix wax or oils with water or liquid potpourri.

1. To use your Aroma Potpourri pot, fill the pot approximately 2/3rd full with either a water-based liquid potpourri or a mixture of tap water and 2 - 3 tbsp of dry scented flowers.
2. To activate your potpourri pot, insert the plug into an electrical outlet.
3. While the potpourri pot is plugged in, make sure that it always contains enough liquid to cover the raised hump on the bottom of the pot.

CLEANING INSTRUCTIONS

Always unplug your potpourri pot and allow it to cool completely before cleaning.

1. After the pot has cooled, empty contents.
 2. Wipe out inside with a damp dishcloth or sponge.
- As always, do not submerge potpourri pot in water or any liquid.
 - Abrasive cleaners are not recommended as they may damage the product.

Limited Warranty

Aroma Housewares Company warrants this product free from defects in material and workmanship for five years from provable date of purchase in continental United States.

Within this warranty period, Aroma Housewares Company will repair or replace, at its option, defective parts at no charge, provided the product is returned, freight prepaid with proof of purchase and U.S. \$4.00 for shipping and handling charges payable to Aroma Housewares Company. Before returning an item, please call the toll free number below for return authorization number. Allow 2-4 weeks for return shipping.

This warranty does not cover improper installation, misuse, abuse or neglect on the part of the owner. Warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station.

This warranty gives you specific legal rights and which may vary from state to state and does not cover areas outside the United States.

AROMA HOUSEWARES COMPANY
6469 Flanders Drive
San Diego, California 92121
1-800-276-6286
M-F, 8:30 AM - 5:00 PM, Pacific Time
Website: www.aromaco.com