

⚠ BEFORE FIRST USE

1. Read all instructions and important safeguards.
2. Remove all packaging materials and check that all items have been received in good condition.
3. Tear up all plastic bags as they can pose a risk to children.

NOTE:

- Never attempt to disassemble the stick blender.
- Do not immerse the wand base of the blender in water.
- The blades are sharp! Handle with extreme care. Do not allow children to operate the appliance.

⚠ IMPORTANT SAFEGUARDS

Basic safety precautions should always be followed when using electrical appliances, including the following:

1. Important: Read all instructions carefully before first use.
2. To protect against risk of electrical shock, do not put cord, plug, or wand base in water or other liquid. See instructions for cleaning.
3. This appliance should not be used by children. To avoid possible accidental injury, close supervision is necessary when any appliance is used by or near children.
4. Unplug cord from outlet when not in use and before cleaning.
5. Avoid any contact with blade or movable parts.
6. Do not operate appliance with a damaged cord or plug, or after appliance malfunctions or has been damaged in any manner. Contact Aroma® customer service for examination, repair or electrical/mechanical adjustment.
7. The use of attachments not recommended or sold by Aroma® Housewares may cause a risk of injury to persons.
8. Never submerge any other portion of this unit. If hand blender falls into liquid, unplug the unit first, then remove blender immediately. Do not reach into the liquid without unplugging the unit first.
9. Avoid placing the appliance where the power cord might be accidentally caught, or the appliance may be knocked into the sink.
10. Ensure hands are dry before operating the switch or turning it off.
11. Use only with a 120V AC power outlet.
12. Do not carry the appliance by the cord. To disconnect, push the button, grasp the plug and remove from outlet. Never unplug by pulling the cord.
13. Do not let cord hang over the edge of a table or counter or touch hot surfaces, including stovetop.
14. Keep all ventilation slots clear of debris and do not cover. Never drop or insert objects into to the opening.
15. Blades are sharp; handle carefully – especially when cleaning inside of the blade guard.
16. If the blades lock and do not move, it may cause damage to the motor. Do not use. Contact Aroma® customer service for examination, repair, or adjustment.
17. Do not use broken, cracked, or loose cutting blades.
18. Do not blend in boiling, steaming, or actively heated liquids. Allow liquids to cool slightly before blending, then reheat to desired temperature.
19. Do not use appliance for anything other than its intended purpose.
20. Do not use outdoors.
21. During operation keep hands, hair, clothing, as well as spatulas and other utensils away from attachments and any mixing container, to reduce risk of injury to persons, and/or damage to the appliance. A spatula may be used, but must be used only when the unit is not operating.
22. When mixing liquids, especially warm liquids, use a tall container or make small quantities at a time to reduce spillage, splattering and possibility of injury from burning.

SAVE THESE INSTRUCTIONS**Short Cord Instructions**

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer extension cords are available and may be used if care is exercised in their use.
3. If a longer extension cord is used:
 - a. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
 - b. The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled by children or tripped over unintentionally.

Polarized Plug

This appliance has a polarized plug (one blade is wider than the other); follow the instructions below: To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.



THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.

TO BLEND

1. Wash fruits or vegetables well. Peel fruits such as oranges and lemons. If necessary remove cores and seeds.
2. Cut food into pieces before putting it into a suitable container for blending.
3. Unwind the power cord and plug into an available 120V AC wall outlet.
4. Press the power button and continue pressing it during operation.
5. Slightly touch the surface of the food with the blender tip and slowly work your way through it.
6. Release the power button to stop blending.
7. After use, unplug the blender from the electrical outlet.

NOTE:

- It is recommended that the blender is not operated for more than one minute at a time. The blender should then be allowed to cool down for at least 4 minutes before starting again.
- Ensure all cutlery and utensils have been removed from the food prior to blending.
- Always use this appliance with caution. Keep hands well clear of moving parts.
- Should you want to blend directly in the saucepan while cooking, take the pan from the stove first, to protect your stick blender from the heat.

HELPFUL HINTS:

- To avoid splashing, insert the stick blender into the container first, and then press the power button.

TO CLEAN

1. Always unplug unit and allow to cool completely before wiping the exterior.
2. Do not use abrasive cleaners. Simply wipe the exterior with a clean damp cloth and dry thoroughly. If a cleaning solution is used, apply to a clean cloth and not directly onto the blender.
3. Wash the blade and blade guard in warm, soapy water. Rinse and dry thoroughly. Make sure to clean ventilation slots of food residues.

NOTE:

- Do not use harsh abrasive cleaners or scouring pads.
- Do not immerse the blender body, cord or plug in water at any time.
- Any other servicing should be performed by Aroma® Housewares. Contact Aroma® customer service at 1-800-276-6286, Monday to Friday 8:30AM-4:30PM PST.

THANK YOU
for your purchase

AROMA

Let us serve you better.
Registration is quick and easy.

- 1** Register online at www.AromaCo.com/registration
- 2** Explore new recipe ideas at www.AromaTestKitchen.com
- 3** Get Inspired and stay connected for ideas, tips and giveaways!

Register online to
ENTER TO WIN
another Aroma®
product in our
monthly drawing!
(No Purchase Necessary)

visit www.AromaCo.com
for more details



www.AromaTestKitchen.com



/AromaHousewares

If you are unable to register online, please call us at 1-800-276-6286 to register by phone.
M-F, 8:30am-4:30pm, Pacific Time

LIMITED WARRANTY

Aroma Housewares Company warrants this product against defects in material and workmanship for 1 year from provable date of purchase in the United States.

Within this warranty period, Aroma Housewares Company will repair or replace, at its discretion, defective parts at no charge, provided the product is returned, freight prepaid with proof of purchase and U.S. \$15.00 for shipping and handling charges payable to Aroma Housewares Company. Before returning an item, please call the toll free number below for a return authorization number. Allow 2-4 weeks for return shipping.

This warranty does not apply if the warranty period expired; the product has been modified by any unauthorized service center or personnel; the defect was subject to abuse, improper use not conforming to product manual instructions, or environmental conditions more severe than those specified in the manual and specification, neglect of the owner or improper installation; the defect was subject to Force Majeure such as flood, lightning, earthquake, other natural calamities, war, vandalism, theft, brownouts or sags (damage due to low voltage disturbances).

This warranty gives you specific legal rights, which may vary from state to state, and does not cover areas outside the United States. Call the number below for service or support:

Aroma Housewares Company
 6469 Flanders Drive, San Diego, CA 92121, U.S.A.
1-800-276-6286 | www.AromaCo.com
 M-F, 8:30am – 4:30pm, Pacific Time