

# AROMA®

## Electric Egg Boiler




## Instruction Manual

*Model Number: AEB-917*

**Congratulations!**

Your **AROMA Egg Boiler** will surely become one of the most versatile and practical appliances in your home.

Please read the following instructions carefully before your first use.

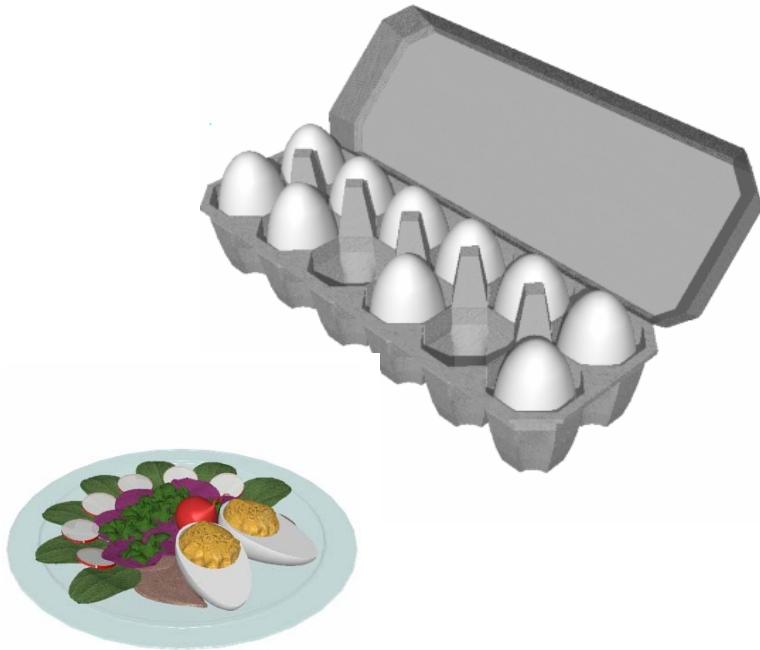

**Published By:**

Aroma Housewares Co.  
6469 Flanders Drive  
San Diego, CA 92121  
U.S.A.

[www.aromaco.com](http://www.aromaco.com)

© 2003 Aroma Housewares Company

# **IMPORTANT SAFEGUARDS**

**Basic safety precautions should always be taken when using electrical appliances, including the following:**

1. Read all instructions before use.
2. Do not touch hot surfaces such as the stainless steel lid. Always use handles and knobs.
3. To protect against electrical shock, do not immerse cord, plug or the product in water or any liquid. Make sure all electrical connections are kept clean and dry.
4. Unplug appliance from wall outlet when not in use and before cleaning. Always allow appliance to cool completely before putting on or taking off parts and before cleaning.
5. Close supervision is necessary when the egg boiler or any appliance is in use near children. This product is not intended for use by children.
6. Do not operate this appliance when the power cord or plug is damaged, or if it malfunctions, is dropped or has been damaged in any manner. Return the appliance to an authorized service station for examination, repair, or electrical/mechanical adjustment.
7. Do not let cord hang over edge of table or counter.
8. Do not place egg boiler on or near a gas or electrical burner, or heated oven.
9. Do not use outdoors.
10. Do not use this appliance for other than intended use.
11. Always use egg boiler on a flat, sturdy, heat resistant surface.
12. Use extreme caution when moving appliances containing hot oil or other hot liquids.
13. To disconnect, remove plug from outlet by grasping the plug and pulling gently. Never tug on the cord to disconnect.
14. Do not use attachments or accessories other than those supplied by the manufacturer. Using incompatible parts creates a hazard.
15. Do not use the appliance near combustible materials such as curtains etc.

## **SAVE THESE INSTRUCTIONS**

# SHORT CORD INSTRUCTIONS

1. A short power-supply cord is provided to reduce risk resulting from becoming entangled in or tripping over a longer cord.
2. Longer extension cords are available and may be used if care is exercised in their use.
  1. If a longer extension cord is used:
    - a. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
    - b. The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled by children or tripped over unintentionally.



## POLARIZED PLUG

This appliance has a **polarized plug** (one blade is wider than the other); follow the instructions below:

To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

**This appliance is intended for household use only.**

# PARTS IDENTIFICATION

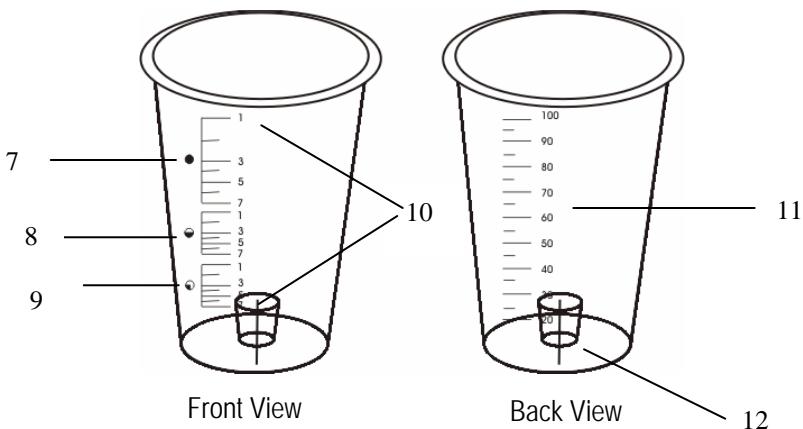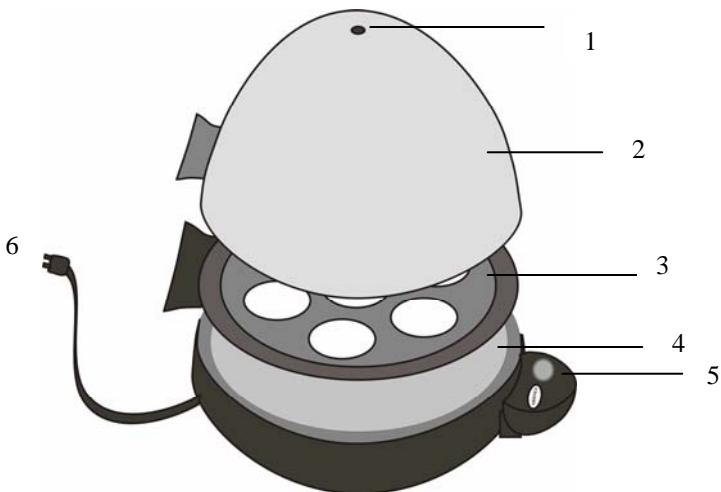

- |                   |                             |
|-------------------|-----------------------------|
| 1. Steam Vent     | 7. Hard Boiled Water Line   |
| 2. Lid            | 8. Medium Boiled Water Line |
| 3. Egg Holder     | 9. Soft Boiled Water Line   |
| 4. Water Tray     | 10. Egg Number Indicator    |
| 5. ON/OFF Switch  | 11. Water Level Indicator   |
| 6. Polarized Plug | 12. Egg Piercer             |

# HOW TO USE

## Before First Use:

1. Read all instructions and important safeguards.
  2. Remove all packaging materials and make sure items are received in good condition. Tear up all plastic bags as they can pose a risk to children.
  3. With a damp cloth, wipe the body of the egg boiler, egg holder and water tray clean.
  4. Wipe the surface of the egg holder and water tray clean with a damp cloth.
- Do not use abrasive cleaners or scouring pads.
- Do not immerse the base, cord or plug in water at any time.



# HOW TO USE CONTINUED

## To Operate Egg boiler:

1. Place the egg boiler upright on a dry, sturdy and flat surface.
2. Fill the provided measuring cup with cold water depending on the desired hardness and the number of eggs, using the respective markings on the cup. For example, if you want 4 medium boiled eggs, fill water cup to the line that corresponds with the medium egg line and the number 4. Pour water into the water tray.
3. Pierce the blunt end of the eggs with an egg piercer, as it prevents the eggs from bursting or cracking during the cooking process.
4. Place eggs on the egg holder. Place the egg holder with the eggs on the water tray and close the lid.
5. Plug into the wall outlet and turn on by pushing the ON/OFF switch. The control light will illuminate.
6. When the eggs are ready, the buzzer will sound, and the light will turn off, but the appliance will remain on until you manually switch it off.
7. If you plan to serve the eggs immediately, switch off the appliance. If you want to keep the eggs warm, leave the appliance in on until you are ready to serve them.
8. Remove the egg holder with the eggs from the water tray and hold them under cold water to end the boiling process. Otherwise the eggs will continue to boil and become harder. You may now serve the eggs.
9. After a short cool-down time of approximately 5 minutes, you may use the egg boiler again.
10. Unplug the appliance after use.

**Note:** The markings on the water measuring cup apply to medium size eggs.

Depending on the size, number and freshness of the eggs, the results may differ slightly.

## Caution:

- Use extreme caution as the stainless steel lid becomes extremely hot. Always use the handle to remove the lid.
- During use, the steam hole on the top of the lid gets very hot. Do not touch or cover steam hole when in use.

# HOW TO CLEAN

## To Clean:

1. Unplug unit from the electrical outlet.
  2. Allow the appliance to cool completely before cleaning.
  3. Wipe the body of the egg boiler clean with a damp cloth. Dry completely with a soft cloth.
  4. Lid and egg holder can be washed and dried with a soft cloth.
  5. Deposits in the water tray can be removed by mixing a solution of water and vinegar or by means of a decalcifier.
- Do not use abrasive cleaners or scouring pads.
- Do not immerse the egg boiler base, cord or plug in water at any time.



# LIMITED WARRANTY

Aroma Housewares Company warrants this product free from defects in material and workmanship for one year from provable date of purchase in continental United States.

Within this warranty period, Aroma Housewares Company will repair or replace, at its option, defective parts at no charge, provided the product is returned, freight prepaid with proof of purchase and U.S. \$4.00 for shipping and handling charges payable to Aroma Housewares Company. **Before returning an item, please call the toll free number below for return authorization number. Allow 2-4 weeks for return shipping.**

This warranty does not cover improper installation, misuse, abuse or neglect on the part of the owner. Warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station.

This warranty gives you specific legal rights and which may vary from state to state and does not cover areas outside the United States.

AROMA HOUSEWARES COMPANY  
6469 Flanders Drive  
San Diego, California 92121  
1-800-276-6286  
M-F, 8:30 AM - 5:00 PM, Pacific Time  
Website: [www.aromaco.com](http://www.aromaco.com)