



www.AromaCo.com/Forte



STAINLESS STEEL ELECTRIC KETTLE

Instruction Manual

AWK-118SB

AROMA[®]

forté
series

Introducing the Stainless Steel Electric Kettle



Published By:

Aroma Housewares Co.

6469 Flanders Drive

San Diego, CA 92121

U.S.A.

1-800-276-6286

www.AromaCo.com/Forte

© 2008 Aroma Housewares Company All rights reserved.

IMPORTANT SAFEGUARDS

Basic safety precautions should always be followed when using electrical appliances, including the following:

1. Read all instructions carefully before using the appliance.
2. Do not touch hot surfaces. Use handles or knobs. Metal surfaces become extremely hot.
3. To protect against fire, electrical shock and injury to persons do not immerse cord, plug or power base in water or any other liquid.
4. Close supervision is necessary when the appliance is used by or near children.
5. Always unplug appliance from outlet when not in use and before cleaning. Allow unit to cool before putting on or taking off parts, and before cleaning and handling the appliance.
6. Do not operate appliance with a damaged cord or plug, or after appliance malfunctions, or has been damaged in any manner. Return the appliance to an authorized service facility for examination, repair or electrical/mechanical adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in damage or injury.
8. Do not use outdoors.
9. Do not allow cord to hang over the edge of a table or counter, or touch hot surfaces.
10. Do not place kettle on or near a hot gas or electric burner, or in a heated oven.

SAVE THESE INSTRUCTIONS

AROMA[®]

forté
series

IMPORTANT SAFEGUARDS

11. To disconnect, turn any control to the off position, then remove the plug from outlet. Never unplug by pulling the cord.
12. Do not use kettle for anything other than its intended use.
13. The power base must only be used with the provided kettle.
14. This kettle is only intended to heat water.
15. Do not unscrew any screws on the kettle or power base.
16. Do not move kettle during the heating process.
17. Do not immerse in water.
18. Scalding may occur if the lid is removed during the heating process.

SAVE THESE INSTRUCTIONS

Polarized Plug

This appliance has a polarized plug (one blade is wider than the other); follow the instructions below:

To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid hazard.

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.

Short Cord Instructions

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer extension cords are available and may be used if care is exercised in their use. If the appliance is of the grounded type, the extension cord should be grounding-type 3-wire cord.
3. If a longer extension cord is used:
 - a. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
 - b. The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled by children or tripped over unintentionally.



AROMA[®]

forté
series

Parts Identification



Using the Stainless Steel Water Kettle

BEFORE FIRST USE:

1. Before first use, make sure the kettle, power base and power cord are in good condition and are completely dry.
2. Remove the kettle from the power base, open the lid and fill the kettle with the desired amount of water. Do not fill past the 'MAX' mark.
3. Close the lid, ensuring it locks closed.
4. Place kettle onto the power base and plug in the unit.
5. Press the 'Power Lever', located on the base, to the down position to activate the kettle. The indicator light will illuminate while the kettle is in operation.
6. **Do not open lid while water is boiling.**
7. Once water has reached a boil, the kettle will release the 'Power Lever' to the up position, the kettle will turn off and the indicator light will blink.
8. If no further heating is required, unplug the kettle from the wall for additional safety.
9. Lift the kettle off the power base before pouring.
10. After pouring, ensure that the bottom of the kettle and the power base are dry. Place the kettle back onto the power base.

AROMA[®]

forté
series

How to Clean

1. Always unplug unit and allow to cool before cleaning
2. Do not use abrasive cleansers. Wipe the exterior with a clean, damp cloth and dry thoroughly. Never disassemble the kettle or base for cleaning.
3. Never immerse the kettle, cord, plug or power base in water.
4. During cleaning, be sure all electrical connections remain completely dry.
5. The filter can be removed for cleaning. Clean the mesh of the filter regularly by running it under the tap. Never try to remove the filter when the kettle is hot or contains hot water.

Troubleshooting

PROBLEM	POSSIBLE REASON	SOLUTION
The kettle and indicator light do not work when the power lever is pressed down.	Unit has no power.	Check that the cord is plugged into the outlet and the kettle is properly connected to the power base.
The water is boiling but the switch does not automatically turn off.	The lid is not closed properly.	Close the lid until it locks into place.
The power switch cannot be pressed down and the kettle will not work.	The kettle is not properly placed on the power base.	Ensure that the kettle is attached correctly and that the connection to the power base is not blocked in any way.

AROMA

forté
series

Limited Warranty

Aroma Housewares Company warrants this product free from defects in material and workmanship for one year from provable date of purchase in the continental United States.

Within this warranty period, Aroma Housewares Company will repair or replace, at its option, defective parts at no charge, provided the product is returned, freight prepaid with proof of purchase and U.S. \$11.00 for shipping and handling charges payable to Aroma Housewares Company. Before returning an item, please call the toll free number below for a return authorization number. Allow 2-4 weeks for return shipping.

This warranty does not cover improper installation, misuse, abuse or neglect on the part of the owner. This warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station.

This warranty gives you specific legal rights, which may vary from state to state, and does not cover areas outside the United States.

AROMA HOUSEWARES COMPANY

6469 Flanders Drive

San Diego, California 92121

1-800-276-6286

M-F, 8:30 AM - 5:00 PM, Pacific Standard Time PST

www.AromaCo.com/Forte



AROMA®

forté
series

www.AromaCo.com/Forte