

AROMA[®]
PROFESSIONAL



instruction manual

AWK-701

Electric Tea Maker

Questions or concerns about your Aroma product?

www.AromaCo.com/Support

1-800-276-6286

**DISCOVER
more of our
products!**



Multicookers/
Rice Cookers



Pressure Cookers



Water Kettles



Indoor Grills



Induction Cooktops

AROMA®

To Enhance and Enrich Lives.

Here at Aroma we strive to make a difference—to design and distribute products that enhance and enrich people's lives.

Aroma offers an array of exceptional products to make cooking simple and satisfying. Discover other countertop appliances and cookware from our current product lineup to complement your kitchen.

 
Stay connected for more recipe ideas and monthly giveaways!



www.AromaTestKitchen.com



[/AromaHousewares](https://www.instagram.com/AromaHousewares)



Published By:

Aroma Housewares Co. | 6469 Flanders Drive, San Diego, CA 92121, U.S.A.

1-800-276-6286 | www.AromaCo.com

©2018 Aroma Housewares Company | All rights reserved.



IMPORTANT SAFEGUARDS

When using electrical appliances basic safety precautions should always be followed, including the following:

1. **Important: Read all instructions carefully before first use.**
2. Do not touch hot surfaces. Use handles or knobs. Metal surfaces become extremely hot.
3. To protect against fire, electric shock and injury to persons, do not immerse cord, plug or kettle in water or any other liquid. See instructions for cleaning.
4. Close supervision is necessary when the appliance is used by or near children.
5. Always unplug the appliance from the outlet when not in use and before cleaning. Allow the kettle to cool completely before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate appliance with a damaged cord or plug, or after appliance malfunctions or has been damaged in any manner. Contact Aroma® customer service for examination, repair or electrical/mechanical adjustment.
7. The use of accessory attachments not recommended by Aroma® Housewares may result in fire, electrical shock or injury.
8. Do not use outdoors.
9. Do not let cord hang over the edge of a table or counter or touch hot surfaces.
10. Do not place kettle on or near a hot gas or electric burner or in a heated oven.
11. To disconnect, push the control dial until power off, then remove the plug from the wall outlet.
12. Do not use kettle for other than its intended use.
13. The power base must only be used with the provided kettle.
14. Do not unscrew any screws on the kettle or power base or attempt to disassemble them in any way.
15. Do not move kettle during the heating process.
16. This appliance is for household use only.
17. Do not immerse this appliance in water.
18. Scalding may occur if the lid is removed during the boiling cycle.
19. **CAUTION:** If water exceeds the MAX line, the boiled water may spill out.
20. Use only on a level, dry and heat-resistant surface.
21. Always unplug from the base of the wall outlet. Never pull on the cord.
22. The electric kettle should be operated on a separate electrical circuit from other operating appliances. If the electrical circuit is overloaded with other appliances the electric kettle may not operate properly.

 
SAVE THESE INSTRUCTIONS



IMPORTANT SAFEGUARDS

Short Cord Instructions

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer extension cords are available and may be used if care is exercised in their use.
3. If a longer extension cord is used:
 - a.) The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
 - b.) The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled by children or tripped over unintentionally.
 - c.) The extension cord should be a grounding-type 3-wire cord.

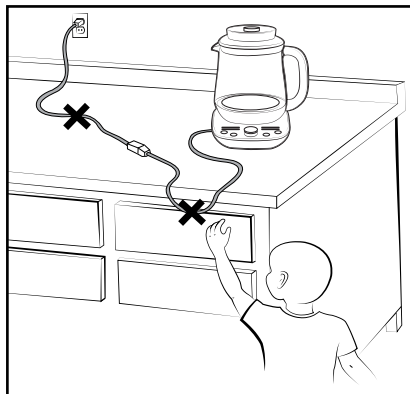


**DO NOT
DRAPE CORD!**

**KEEP AWAY
FROM CHILDREN!**


Grounding Instructions

 This appliance must be grounded while in use to protect the operator from electrical shock. The appliance is equipped with a 3-conductor cord and a 3-prong grounding-type plug to fit the proper grounding-type receptacle. The appliance has a plug that looks like figure (A).

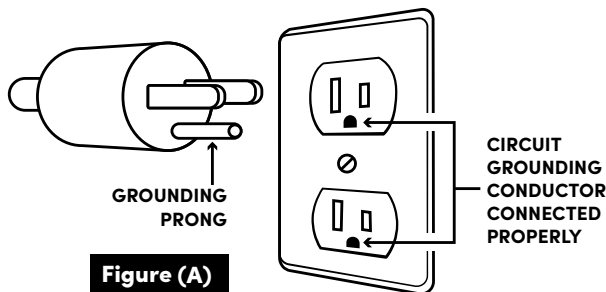

**THIS APPLIANCE IS FOR
HOUSEHOLD USE ONLY.**

 Parts Identification

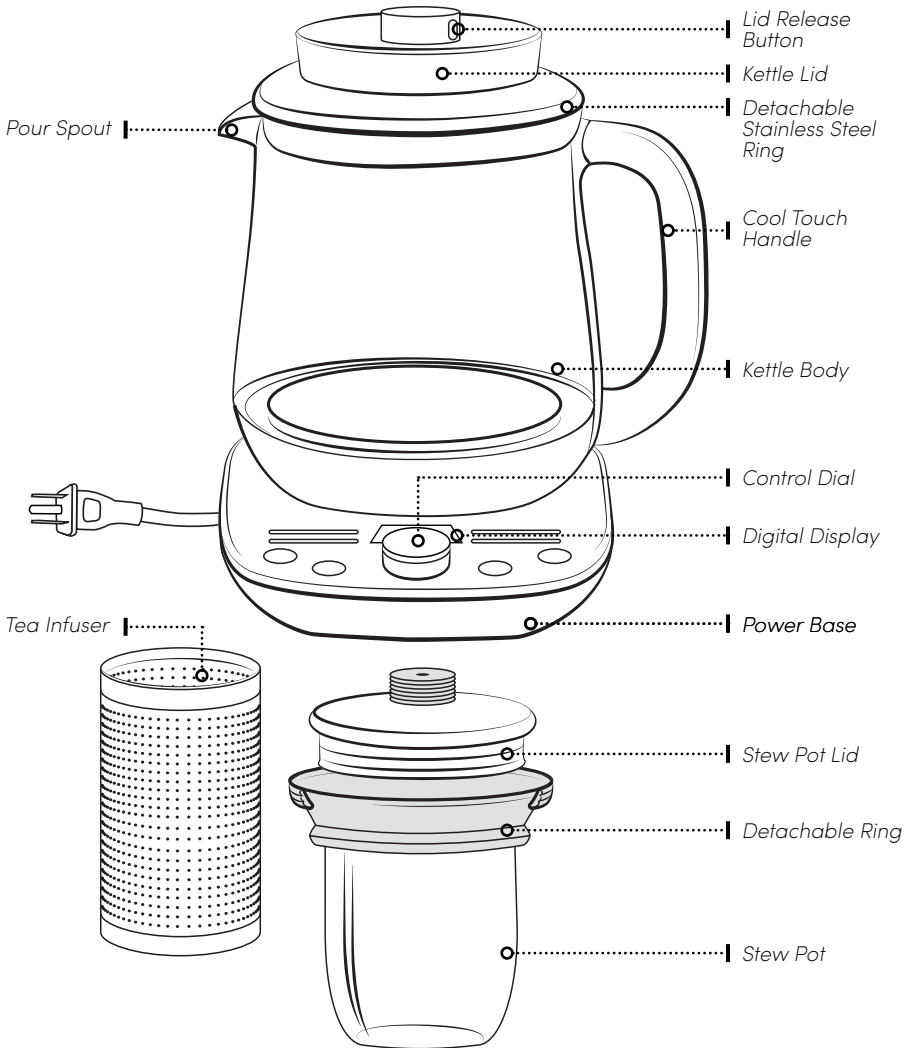

Controls/Functions

Start/Select

Press to turn on unit. Turn dial to select a function then press to start.

Keep Warm Setting

Adjusts Keep Warm temperature to 113-193 °F.

Time Setting

Adjust heating time for each function.

Cancel

Ends selected function.

Delay Timer

Set delay timer up to 9 hours in 30 minute increments.

BEFORE FIRST USE

Before using for the first time, it is recommended to clean the interior of the kettle thoroughly. Please follow the procedures below before using the kettle:

1. Read all instructions and important safeguards.
 2. Remove all packing materials and make sure that the product has been received in good condition.
 3. Take care to keep the electrical components on the exterior of the kettle dry, wipe out the interior of the kettle with a damp cloth. If your hand will not fit inside the kettle, swish warm, soapy water around in the interior of the kettle with the lid closed.
 4. Rinse out the inside of the kettle thoroughly with water.
 5. With a damp cloth, gently wipe off the exterior of the kettle. Do not wipe off electrical components as this may cause damage to the unit.
 6. Dry all parts completely.
 7. It is recommended to run your kettle through one boiling cycle before using it to consume beverages. Following the instructions in **BOILING WATER** on page 8, boil one kettle of water. When water has boiled, pour it out and rinse the inside of the kettle once more. The kettle is now ready for use.
-

TO CLEAN

1. Wipe the exterior of the kettle with a damp cloth, taking care to avoid the electrical components.
 2. Clean the interior of the kettle with a soft sponge and warm, soapy water. If your hand does not fit in the lid opening, swish warm, soapy water around inside the kettle with the lid closed.
 3. Rinse any remaining soapy water from the kettle.
 4. Drain.
-



Caution:

Always unplug the kettle and allow it to cool completely before cleaning.

Never attempt to disassemble the kettle or the power base.

Never immerse the kettle, power cord, plug or power base in water.

Always take care not to allow electrical components to come into contact with water.

Do not use abrasive cleaners or scouring pads of any kind on the kettle or power base. This will cause damage to the finish and may create a risk of electrical shock.

Note:

Any other servicing should be performed by Aroma® Housewares.

TROUBLESHOOTING

The kettle and indicator light do not work when powered on.

- Make sure the kettle is seated properly on the power base and that the base is connected to a functioning electrical outlet.
- If the kettle is heated with no water, the internal safety mechanism will automatically turn the kettle off. The kettle will begin working again after the kettle is removed from and returned to the base and the internal temperature drops to a safe level. The kettle functions properly when water is added.

The water is boiling, but the power switch and indicator light do not turn off.

- The auto shut-off function will not operate properly if the lid is not completely closed. Allow kettle to cool, then check to see that the lid is properly locked into place.

There are mineral deposits on the interior of the kettle.

- A certain amount of scale build-up is normal after long periods of use and is caused by minerals contained in hard water. The best way to prevent mineral deposits is to always use distilled water in the kettle.
 - To remove deposits, try filling the kettle halfway with water and adding a few slices of lemon, then boil. If this does not work, please see **REMOVING MINERAL DEPOSITS** page 8.
-

Note:

- If the problem persists, please contact our customer service department toll-free at **(800) 276-6286** or through email at **CustomerService@AromaCo.com**.

BOILING WATER

1. Place power base on a sturdy, level and dry surface.
2. Open the kettle lid and fill with water through opening. Water must be filled between the **MIN** and **MAX** levels.
3. Close the lid.
4. Place the kettle onto the power base.
5. Plug the power cord into an available 120V AC wall outlet.
6. Press the **Start/Select** button to turn the unit on.
7. Turn the dial to select function **01: Boil**.
8. Press the **Start/Select** button. The unit will beep and begin to heat.
9. Once the water reaches a boil, the unit will beep and turn off automatically.
10. If keep warm is desired, before it reaches boiling, press **Keep Warm Setting** button to set the desired keep warm temperature. After it reaches a boil it will switch to **16:Keep Warm** automatically.
11. Using the handle, lift the kettle off the power base to serve. Do not touch the glass body, as it will be hot.
.....

MINERAL DEPOSITS

Hard water can leave mineral deposits that create scale build-up on the interior of the kettle. If mineral deposits occur, follow these steps:

1. Fill the kettle halfway with water.
2. Following the instructions in **BOILING WATER** listed above, bring the water to a boil.
3. Add one cup of white vinegar to the water in the kettle.
4. Allow the mixture to soak overnight.
5. Empty the mixture and rinse out the kettle.
6. Refill the kettle with water only. Bring it to a boil and empty again. Repeat as needed.
.....



Caution:

The glass portions of the kettle will become extremely hot during use and remain hot for sometime after. **Do not touch the glass body or lid until the kettle has cooled completely.**

Note:

Never open the lid while water is boiling.

Helpful Hints:

Using distilled water will help to prevent the buildup of mineral deposits.

KEEP WARM

1. Place the power base on a sturdy, level and dry surface.
2. Open the kettle and fill with desired liquid.
3. Close the lid.
4. Place the kettle onto the power base.
5. Plug the power cord into an available 120V AC wall outlet.
6. Press the **Start/Select** button to turn the unit on.
7. Turn the dial to select function **16: Keep Warm**.
8. Press the **Keep Warm Setting** button to adjust the temperature from 113-193 degrees Fahrenheit with the dial.
9. Press the **Time Setting** button to adjust the keep warm duration.
10. Press **Start/Select**. The kettle will be kept at the desired temperature until the time has expired.
.....

DELAY TIMER

1. Place the power base on a sturdy, level and dry surface.
2. Open kettle and fill with desired amount of water and/or ingredients.
3. Close the lid.
4. Place the kettle onto the power base.
5. Plug the power cord into an available 120V AC wall outlet.
6. Press the **Start/Select** button to turn the unit on.
7. Turn the dial to select the desired function.
8. After selecting the desired function, press the **Delay Timer** button. The functions available for delay timer are **01:Boil, 06:Herbal Tea, 09:White Fungus, 10:Bird's Nest, 11:Dessert, 13:Porridge, 14:Soup**.
9. Adjust the desired delay time with the turn dial or press the **Time Setting** button.
10. Press the **Start/Select** button to begin **Delay Timer**. Once the selected amount of time has occurred, the unit will begin heating for the selected function.
.....

Note:

All functions EXCEPT **01:Boil** and will automatically switch to the **Keep Warm** mode after they have reached temperature.

SELECTING A FUNCTION

1. Place the power base on a sturdy, level and dry surface.
2. Fill the kettle with water and/or desired ingredients.
3. Close the lid.
4. Place the kettle onto the power base.
5. Plug the power cord into an available 120V AC wall outlet.
6. Press the **Start/Select** button to turn the unit on.
7. Turn the dial to select the desired function.
8. Press the **Start/Select** button; the kettle will begin the function.

FUNCTION TEMPERATURES

| | Function | Temperature (°F) |
|----|---------------|------------------|
| 01 | Boil | 212 |
| 02 | Black Tea | 212 |
| 03 | Green Tea | 170 |
| 04 | White Tea | 160 |
| 05 | Fruit Tea | 212 |
| 06 | Herbal Tea | 212 |
| 07 | Milk Tea | 200 |
| 08 | Oolong | 185 |
| 09 | White Fungus | 212 |
| 10 | Bird's Nest | 212 |
| 11 | Dessert | 212 |
| 12 | Chinese Herbs | 212 |
| 13 | Porridge | 212 |
| 14 | Soup | 212 |
| 15 | Milk Formula | 130 |
| 16 | Keep Warm | 113-193 |



Caution:

The glass portions of the kettle will become extremely hot during use and remain hot for sometime after. **Do not touch the glass body or lid until the kettle has cooled completely.**

Note:

Never open the lid while water is boiling.

Helpful Hints:

Using distilled water will help to prevent the buildup of mineral deposits.

TIME SETTING

1. Place the power base on a sturdy, level and dry surface.
2. Open the kettle and fill with water and/or desired liquid.
3. Close the lid.
4. Place the kettle onto the power base.
5. Plug the power cord into an available 120V AC wall outlet.
6. Press the **Start Select** button to turn the unit on.
7. Turn the dial to select desired function.
8. Press the **Time Setting** button to adjust heating time.
9. Press **Start/Select**. The kettle will heat for the amount of time that was set and switch to **Keep Warm** once the time has expired.
.....

Note:

All functions EXCEPT **01:Boil** will automatically switch to the **Keep Warm** mode after they have reached temperature.

RECIPES

Bird's Nest & Red Dates

| | |
|----------|-------------------------|
| 1 piece | dried bird's nest |
| 8 | small red dates, rinsed |
| 2 tbsp | rock sugar |
| 1 ½ cups | water |

Soak dried bird's nest in cold water for 4 hours. Use tweezers to pick out the feathers. Change water once after 2 hours. Drain water.

Pour 4 cups water into kettle. Place 1 ½ cups of water, soaked bird's nest, and red dates into the stew pot. Then place into the kettle with water. Select **10:Bird's Nest** and push **Start/Select** to cook for 40 minutes. When done cooking, add rock sugar.

SERVES 2.
.....

Chicken Nagaimo Soup

| | |
|----------|--|
| 2 | chicken wings cut into 3 inch pieces |
| 1 | chicken leg cut into 3 inch pieces |
| 1 cup | nagaimo, cut into 2 inch pieces |
| 5 | dried shiitake mushrooms, soaked & stemmed |
| 7 | red dates |
| 2 inches | ginger, sliced |
| 1 tbsp | goji berries |
| 2 tbsp | rice wine |
| 1 tbsp | salt |
| 5 cups | water |

Add chicken, mushrooms, red dates, ginger, and water into kettle. Select **14:Soup** and push **Start/Select** to cook for 37 minutes. Add goji berries, nagaimo, cooking wine, and salt for 3 minutes.

SERVES 4.
.....

Note:

All functions EXCEPT **01:Boil** will automatically switch to the **Keep Warm** mode after they have reached temperature.

RECIPES

Dried Snow Fungus Lotus Seeds & Red Dates Soup

| | |
|--------|----------------------------------|
| 1 | dried snow fungus, stems trimmed |
| ¼ cup | dried lotus seeds, rinsed |
| ¼ cup | dried red dates, seeded |
| 5 cups | water |
| 2 tbsp | rock sugar |

Soak dried snow fungus in water for 20 minutes, then tear apart into small pieces. Add water and all ingredients (except the rock sugar) to the kettle. Select **09:White Fungus** and cook for 1 hour. When done cooking, add rock sugar.

SERVES 4.
.....

Ginseng Assorted Herb Chicken Soup

| | |
|----------|--|
| 1 ½ oz | assorted herbs including ginseng, rinsed |
| 3 pieces | chicken legs |
| 1 ¾ cups | water |

Pour 4 cups of water into kettle Soak assorted herbs into the stew pot with 1 ¾ cups water for 40 minutes. Then add chicken. Cover the lid. Select **12:Chinese Herbs** and push **Start/Select** to cook for 40 minutes.

SERVES 2.
.....

RECIPES

Red Bean Soup

| | |
|--------|--|
| 4 oz | dried red beans, rinsed and soaked overnight |
| 2 tbsp | rock sugar |
| 2 | dried orange peels |
| 5 cups | water |

Add red bean, orange peels, and water into kettle. Select **11:Dessert** and cook for 1 hour and 20 minutes. When done cooking, stir in rock sugar.

SERVES 4.
.....

Porridge

| | |
|---------|-------|
| ½ cup | rice |
| 1 liter | water |

Rinse rice until water runs clear. Add rice to kettle, then add water. Select **13:Porridge** and cook for 40 minutes-1 hour 30 minutes depending on your preference.

SERVES 4.
.....

For additional recipes, visit us at
www.AromaCo.com or at www.AromaTestKitchen.com

LIMITED WARRANTY

Aroma Housewares Company warrants this product against defects in material and workmanship for two years from provable date of purchase in the United States.

Within this warranty period, Aroma Housewares Company will repair or replace, at its discretion, defective parts at no charge, provided the product is returned, freight prepaid with proof of purchase and U.S. \$20.00 for shipping and handling charges payable to Aroma Housewares Company. Before returning an item, please call the toll free number below for a return authorization number. Allow 2-4 weeks for return shipping.

This warranty does not apply if the warranty period expired; the products has been modified by any unauthorized service center or personnel; the defect was subject to abuse, improper use not conforming to product manual instructions, or environment conditions more severe than those specified in the manual and specification, neglect of the owner or improper installation; the defect was subject to Force Majeure such as flood, lightning, earthquake, other natural calamities, war, vandalism, theft, brownouts or sags (damage due to low voltage disturbances).

This warranty gives you specific legal rights, which may vary from state to state, and does not cover areas outside the United States.

.....

SERVICE & SUPPORT

In the event of a warranty claim, or if service is required for this product, please contact Aroma@ customer service toll-free at:

1-800-276-6286

M-F, 8:30am-4:30pm, Pacific Time

Or we can be reached online at:

CustomerService@AromaCo.com

For your records, we recommend stapling your sales receipt to this page along with a written record of the following:

· Date of Purchase:

· Place of Purchase:

.....

Aroma Housewares Company
6469 Flanders Drive, San Diego, CA 92121, U.S.A.

1-800-276-6286 | www.AromaCo.com

M-F, 8:30am – 4:30pm, Pacific Time

Note:

· Proof of purchase is required for all warranty claims.



To Enhance and Enrich Lives.



www.AromaCo.com