

AROMA[®]

Thermoelectric Cooler Wine Cellar



Instruction Manual

Model PEC-806

Congratulations! Your **AROMA** Wine Cellar is the perfect addition to your home. It will add a touch of sophistication to any room while preserving your favorite wines and maintaining the value of your collectables.

Our wine cellar employs thermoelectric technology by using the *Peltier* cooling system. *Peltier* technology eliminates vibrations caused by traditional compressor units, ensuring the integrity of the wines' flavor.

The **AROMA** Wine Cellar maintains excellent performance while conserving power and being energy efficient. Safe and quiet, this wine cellar will provide the ultimate in reliability.

Please read the following instructions carefully before your first use.



Published By:

Aroma Housewares Co.
6469 Flanders Drive
San Diego, CA 92121
U.S.A.
1-800-276-6286
www.aromaco.com

© 2005 Aroma Housewares Company All rights reserved.

IMPORTANT SAFEGUARDS

Basic safety precautions should always be followed when using electrical appliances, including the following:

1. Read all instructions before use.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plug or wine cellar in water or any other liquid.
4. Close supervision is necessary when this appliance is used by or near children. This appliance is not intended to be used by children.
5. Unplug from outlet when not in use and before cleaning. Allow to completely cool before putting on or taking off any parts, and before cleaning.
6. Do not operate this appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electrical burner, or in a heated oven.
11. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. Avoid contact with moving parts.
15. The unit requires good ventilation to operate properly. Do not block the ventilator and keep it at least 2 inches away from other objects.
16. When appliance is used in areas of high temperature or humidity, droplets of water may form inside the unit. This condensation is due to variances in temperature and humidity and is not a malfunction. Wipe droplets off with dry cloth.
17. To avoid risk of electrical shock, do not spill any liquid on the surface of the unit during operation.

SAVE THESE INSTRUCTIONS

 
SHORT CORD INSTRUCTIONS

1. A short power-supply cord is provided to reduce risk resulting from becoming entangled in or tripping over a longer cord.
2. Longer extension cords are available and may be used if care is exercised.
3. If a longer extension cord is used:
 - a. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
 - b. The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled by children or tripped over unintentionally.

POLARIZED PLUG



This appliance has a **polarized plug** (one blade is wider than the other); follow the instructions below:

To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

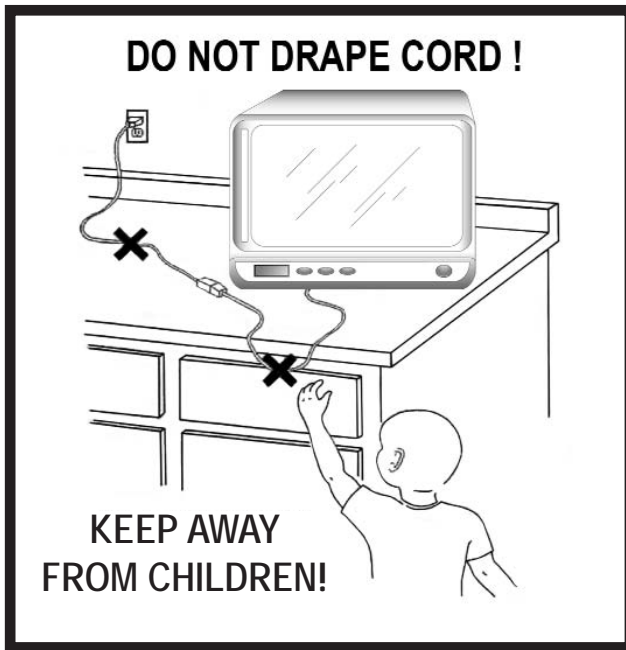

This appliance is for household use only.

  PARTS IDENTIFICATION

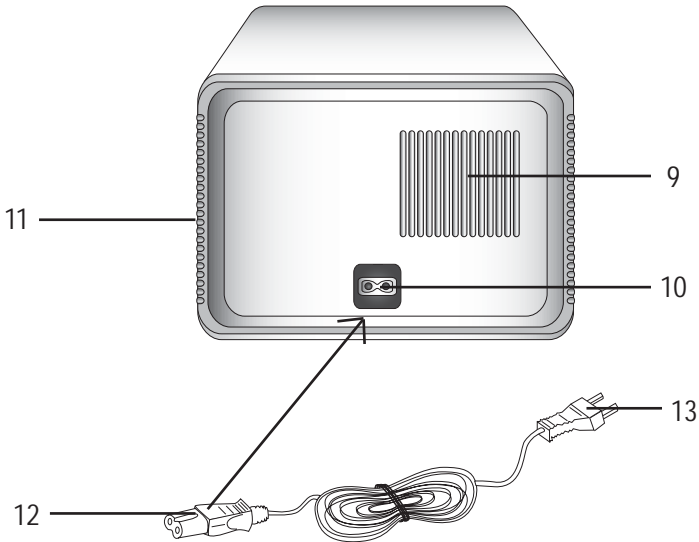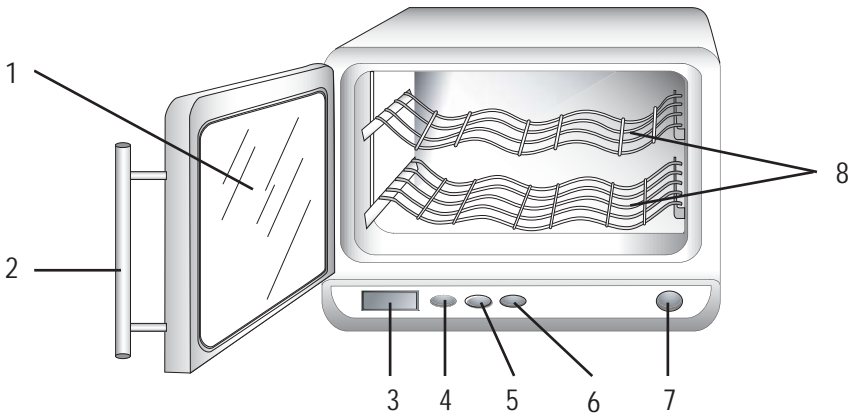

- | | |
|-----------------------------|-------------------------|
| 1. Glass Window | 8. Wine Bottle Racks |
| 2. Door Handle | 9. Ventilator (inlet) |
| 3. LED Digital Display | 10. AC Power Socket |
| 4. Temperature "-" Adjuster | 11. Ventilator (outlet) |
| 5. Temperature "+" Adjuster | 12. AC Plug For Unit |
| 6. Internal Light Switch | 13. AC Plug For Wall |
| 7. Power Button | |

HOW TO USE

1. Put the power cord into the back of the unit and plug the other end into the wall outlet.
2. Once plugged in, press the power button to turn on the unit.
3. Set the temperature range from 44°F to 64°F (7-18°C) by adjusting the “ + ” or “ - ” button. When the desired temperature is higher or lower than the actual temperature of the inner case, the system will begin to heat, cool or maintain the temperature.
4. The unit will display the actual internal temperature if left idle for 5 seconds.
5. The internal LED display will turn on when the door is opened and turn off when the door is closed. The light can be turned on manually by pressing the “Light” button.
6. The unit will turn off if the power switch is pressed again.

ATTENTION:

- The unit needs good ventilation in order to work properly.
- DO NOT block the ventilator and keep it at least 2 inches away from obstructions.
- DO NOT use acid, gasoline, alcohol or any other organic solution to wipe the surface. It can damage the unit.
- The unit should be kept away from rain and direct sunlight.
- Avoid any collisions with unit as they may cause damage to the unit and may destroy electronic parts.
- When appliance is used in areas of high temperature or humidity, droplets of water may form inside the unit. This condensation is due to variances in temperature and humidity and is not a malfunction. Wipe droplets off with dry cloth.
- This unit is only to be repaired by qualified service agents.
Please do not attempt to fix the unit yourself.

HOW TO CLEAN

1. Unplug unit before cleaning and allow to cool completely.
2. For grease or dirt, use a soft cloth and a mild detergent.
3. For a small amount of dirt or dust, wipe inside and outside of unit with a soft, damp cloth.
4. Do not immerse unit in any liquid.
5. In order to clean the dirt in the ventilation areas, use a hand vacuum cleaner or a brush, then wipe areas with a soft damp cloth.
6. Unplug before storing.

TROUBLESHOOTING

If the unit stops working, the fan doesn't run or there is a failure in cooling or heating:

1. Check if power is connected and unit is turned on.
2. Check if there is an object that might be blocking the inlet and/or the outlet of the ventilators.
3. Check if the unit is placed too close to other objects that have blocked the inlet or outlet ventilators.
4. If the unit has poor cooling performance or the outside fan does not work, the fan may have broken down. Please contact Aroma for repair.
5. If the unit is not cooling at all while the fan is working well, the cooling element may be broken. Please contact Aroma for repair.
6. For all other problems, please call Aroma for repair.

LIMITED WARRANTY

Aroma Housewares Company warrants this product free from defects in material and workmanship for one year from provable date of purchase in the continental United States.

Within this warranty period, Aroma Housewares Company will repair or replace, at its option, defective parts at no charge, provided the product is returned, freight prepaid with proof of purchase and U.S. \$8.00 for shipping and handling charges payable to Aroma Housewares Company. Before returning an item, please call the toll free number below for return authorization number. Allow 2-4 weeks for return shipping.

This warranty does not cover improper installation, misuse, abuse or neglect on the part of the owner. Warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station.

This warranty gives you specific legal rights which may vary from state to state and does not cover areas outside the United States.

AROMA HOUSEWARES COMPANY
6469 Flanders Drive
San Diego, California 92121
1-800-276-6286
M-F, 8:30 AM - 5:00 PM, Pacific Time
Website: www.aromaco.com