

# AROMA®

P R E S T I G E

## 2 -Slice Stainless Steel Toaster



## Instruction Manual

PTS-202

Congratulations on your purchase of the **AROMA**  
PRESTIGE Stainless Steel 2-Slice  
Toaster. It will surely become one of your most practical appliances in your  
home.

Please read all instructions before your first use.

Published By:

Aroma Housewares Co.  
6469 Flanders Drive  
San Diego, CA 92121  
U.S.A.  
1-800-276-6286  
[www.aromaco.com](http://www.aromaco.com)

© 2004 Aroma Housewares Company All rights reserved.

# IMPORTANT SAFEGUARDS

*Basic safety precautions should always be followed when using electrical appliances, including the following:*

1. Important: Read all instructions carefully before the first use.
2. Do not touch hot surfaces. Use handles or knobs.
3. To prevent electrical shock, do not immerse cord, plug, or the appliance itself in water or any other liquid.
4. Never leave the appliance unattended when in use.
5. This appliance is not intended to be used by children. Close supervision is necessary when the appliance is in use near children.
6. Do not operate or place the toaster on non-heat-resistant or flammable surface.
7. Do not place/ operate toaster on hot burner, gas stove or in a heated oven.
8. Do not operate appliance when the power cord/ plug is damaged, if it malfunctions, is dropped or has been damaged. Return the appliance to an authorized service station for examination, repair or electrical/ mechanical adjustment.
9. Do not use attachments or accessories other than those supplied or recommended by the manufacturer. Incompatible parts create a hazard.
10. Do not toast food that will drip fillings or coatings when heated. Clean out accumulated crumbs frequently. Such accumulation inside the toaster is unsanitary and increases the risk of fire or toaster malfunction.
11. Do not operate the toaster without the crumb tray securely in position.
12. Do not insert fingers, metal and non-metal utensils, foil-covered and oversized foods, etc in toaster when plugged in as it increases the risk of electric shock.
13. Do not use outdoors.
14. Do not let cord hang over edge of table or counter, or touch hot surfaces.
15. Do not use the appliance for other than its intended use.

## SAVE THESE INSTRUCTIONS

## **ADDITIONAL IMPORTANT SAFEGUARDS**

16. Do not place paper or plastic or similar materials in or on the oven. Never store any items on top of the appliance.
17. Unplug from outlet when not in use and before cleaning. Allow the unit to cool before putting on or taking off parts, and before cleaning the appliance.
18. Do not attempt to dislodge food when toaster is plugged in.
19. Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
20. A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.

## **SAVE THESE INSTRUCTIONS**

# SHORT CORD INSTRUCTIONS

1. A short power-supply cord is provided to reduce risk resulting from becoming entangled in or tripping over a longer cord.
2. Longer extension cords are available and may be used if care is exercised in their use.
3. If a longer extension cord is used:
  - a. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
  - b. The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled by children or tripped over unintentionally.


# POLARIZED PLUG

This appliance has a **polarized plug** (one blade is wider than the other); follow the instructions below:

To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

**This appliance is for household use only.**

# PARTS IDENTIFICATION

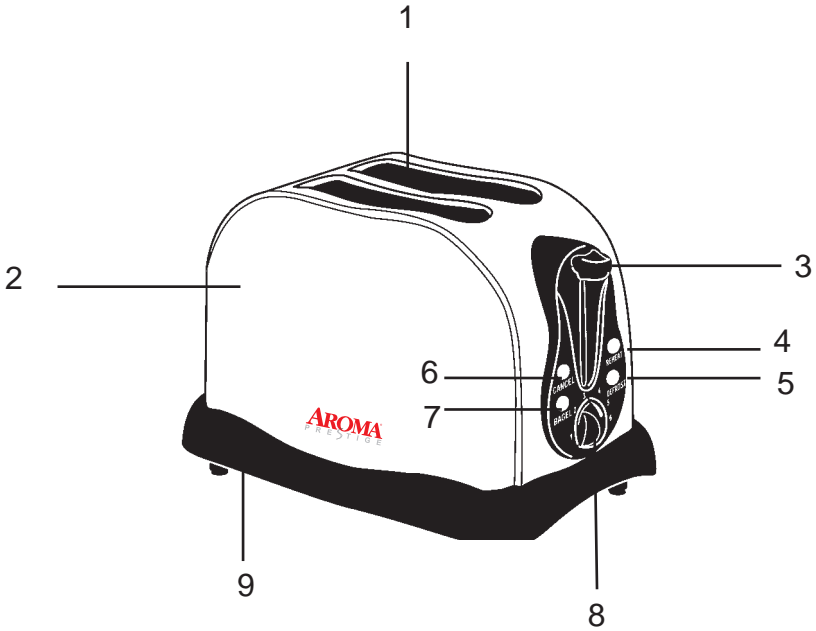

1. Toasting slots
2. Brushed stainless steel exterior
3. Toasting lever
4. Reheat button
5. Defrost button
6. Cancel button
7. Bagel button
8. Toast darkness selector
9. Slide-out crumb tray

# HOW TO USE

## **Before First Use:**

1. Remove any stickers from the surface of the toaster and wipe the surface with a damp cloth.
2. Select a flat, heat-resistant non-flammable surface to place the toaster.
3. Plug the toaster into a 120V/60Hz AC outlet.

## **Control Buttons:**

1. CANCEL: Press anytime during the toasting process to end the cycle. The bread will pop up from the toaster.
2. BAGEL: Press this button if you want to toast a bagel. Light illuminates.
3. DEFROST: For frozen bread, press the DEFROST button to extend toasting time.
4. REHEAT: To reheat and warm any toasted breads or bagels.

## **Adjusting Darkness:**

You may adjust the darkness of toast from 1 to 6, one being the lightest and six the darkest. Selection depends on the thickness of the bread and its moisture content. It is recommended that you select 3 or 4 (the middle range); then adjust to your preference.

## **To Toast:**

1. Remove all wrappings from food. Select the desired toast color or function button.
2. Place bread into toast slots and press down lever.
3. When toasting a single slice, the bread can be placed in either of the slots.
4. Toast will automatically pop up when done.

## **CAUTION:**

- Do not leave the toaster unattended.
- Do not block the top of toaster opening when in use.
- Do not toast any type of buttered bread. Melted butter will cause fire.
- Never use a fork or sharp-edged utensil to remove toast.

# HOW TO CLEAN

*Always unplug toaster and allow to cool completely before cleaning.*

## To Clean the Body of Toaster:

Wipe the body of the toaster clean with a soft, damp cloth.

## To Clean Crumb Tray:

1. Gently slide the crumb tray out to dump the crumbs.
2. Use a damp cloth to clean the crumb tray.
3. Always dry the crumb tray before replacing.
4. Push firmly to close the tray and make sure the tray fits up against the toaster.

NOTE: It is recommended to clean the crumb tray every other week.

### **CAUTION:**

- Do not immerse the toaster in water or any liquid.
- Do not use abrasive cleaners or scouring pads for cleaning.
- Do not use any accessories if they are still wet.
- Do not clean the heating elements.
- Do not use the dishwasher to clean the toaster.
- Make sure the slide-in crumb tray is cleaned on a regular basis.  
Built-up crumbs could cause fire.



# LIMITED WARRANTY

Aroma Housewares Company warrants this product free from defects in material and workmanship for one year from provable date of purchase in continental United States.

Within this warranty period, Aroma Housewares Company will repair or replace, at its option, defective parts at no charge, provided the product is returned, freight prepaid with proof of purchase and U.S. \$8.00 for shipping and handling charges payable to Aroma Housewares Company. Before returning an item, please call the toll free number below for return authorization number. Allow 2-4 weeks for return shipping.

This warranty does not cover improper installation, misuse, abuse or neglect on the part of the owner. Warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station.

This warranty gives you specific legal rights and which may vary from state to state and does not cover areas outside the United States.

AROMA HOUSEWARES COMPANY  
6469 Flanders Drive  
San Diego, California 92121  
1-800-276-6286  
M-F, 8:30 AM - 5:00 PM, Pacific Time  
Website: [www.aromaco.com](http://www.aromaco.com)